WARNING - ROTARY SURFACE CLEANER SAFETY

Any piece of equipment can be dangerous if not operated properly. **YOU** are responsible for the safe operation of this equipment. The operator must carefully read and follow any warnings, safety signs and instructions provided with or located on the equipment. Do not remove, defeat, deface, or

render inoperable any of the safety devices or warnings on this equipment. <u>IF</u> any safety devices or warnings have been removed, defeated, defaced, or rendered inoperable, **DO NOT USE THIS EQUIPMENT!!!**

If the person receiving this handout will not be the user of the equipment, forward these instructions to the operator. **IF** there is any doubt as to the operation or safety of the equipment,

DO NOT USE!! CALL A TOOL SHED IMMEDIATELY!!! FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN INJURY OR DEATH

SPECIFICATIONS		
Model	AW-7020-8003	
Operating Pressure	1,000 to 4,000 PSI	
Maximum Flow	5.0 GPM	
Maximum Temp.	180°F	
Nozzles (2 per unit)	25025	
Weight	18 lbs	
Dimensions	70" x 22" x 22"	

WARNING: Plastic cases and product plastic housings made from polycarbonate or other plastics can expose you to chemicals including bisphenol A, which are known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65warnings.ca.gov

HAZARD	POTENTIAL CONSEQUENCE	PREVENTION
RISK OF BODILY INJURY	Serious injury or death could occur.	ALWAYS read, understand, and follow operation instructions.
		ALWAYS wear protective eye wear.
		ALWAYS keep clear of rotating nozzles.
		NEVER lock trigger gun open with any device.
RISK OF EQUIPMENT	Risk of major repair.	Drain water in cold weather to avoid freezing.
DAMAGE		Use only genuine Mi-T-M replacement parts for necessary repairs.
		Tampering with any part of this machine will void all warranties.

OPERATION:

Read, understand, and follow ALL safety guidelines and operation instructions prior to use.

- 1. Connect to pressure washer.
- 2. Turn water on and open valve. Open trigger gun for flow of water through nozzles. Nozzles must have flowing spray. If not, remove tips and clean; reassemble, making sure that groove of nozzle is parallel to spray bar. Use Teflon tape when installing nozzles.
- 3. Start pressure washer. The Rotary Surface Cleaner is ready for operation.
- 4. Walk slowly behind the Rotary Surface Cleaner cleaning as you go. If striping occurs, slow down your pace.
- 5. Check "weep holes" on bottom of swivel periodically. Water will seep slowly; if water shoots out, stop and replace seals. Swivel assembly can be rebuilt.
- 6. For maximum effectiveness keep spray tips clean. If the machine vibrates, stop and clean spray tips.

DO NOT ALLOW MACHINE TO REMAIN STATIONARY ON SOFT SURFACES. SUCH AS WOOD.

CAUTION: Striking any raised obstacle during operation will damage machine. If contact does occur and results in vibration when operating machine, STOP and replace spray bar. Continued operation could result in serious injury or damage to machine.