

WARNING COMPACT TRACK SKID STEER LOADER SAFETY

Any piece of equipment can be dangerous if not operated properly. **YOU** are responsible for the safe operation of this equipment. The operator must carefully read and follow any warnings, safety signs and instructions provided with or located on the equipment. Do not remove, defeat, deface or render inoperable any of the safety devices or warnings on this equipment. If any safety devices or warnings have been removed, defeated, defaced, or rendered inoperable, **DO NOT USE THIS EQUIPMENT!!!**

⚠️ WARNING: Operating, servicing, and maintaining this equipment can expose you to chemicals including engine exhaust, carbon monoxide and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize your exposure, avoid breathing exhaust, do not idle the engine except as necessary, operate and service your equipment in a well-ventilated area and wear gloves or wash your hands frequently when servicing your equipment. For more information go to www.P65warnings.ca.gov

WARNING!

- Never operate power equipment of any kind if you are tired or if you are under the influence of alcohol, drugs, medication, or any substance that could affect your ability or judgment. Be alert! If you get tired while operating this equipment, take a break. Tiredness may result in loss of control.
- Provide adequate ventilation when operating this equipment. Internal combustion engines consume oxygen and give off deadly carbon monoxide gas.
- **DANGER:** This equipment has multiple pinch points that can cause dismemberment or death. Keep hands, feet and all other body parts clear at all times.

Beware, Rabbit Mode (high speed) uses much more fuel and may result in the tractor requiring refueling in less than 8 hours. Use Rabbit Mode for transporting material only. Never use for digging or grading.

This equipment is subject to Section 2449 (d)(3) California Code of Regulations

(A) **Idling Limit** - No vehicle or engines subject to this regulation may idle for more than 5 consecutive minutes. Idling of a vehicle that is owned by a rental company is the responsibility of the renter or lessee, and the rental agreement should so indicate. The idling limit does not apply to:

1. idling when queuing,
2. idling to verify that the vehicle is in safe operating condition,
3. idling for testing, servicing, repairing or diagnostic purposes,
4. idling necessary to accomplish work for which the vehicle was designed (such as operating a crane),
5. idling required to bring the machine system to operating temperature, and
6. idling necessary to ensure safe operation of the vehicle.

Operating Weight 6350 Lbs. Maximum properly loaded bucket capacity 1330 Lbs.

Please note that it is far more likely for a track to come off when this Skid Steer Loader is used on a hill side. If this occurs, we may not be able to safely put the track back on without the unit being moved to flat ground. The customer is responsible for moving the Loader to flat ground. Customers are responsible for tow and recovery services should the Loader become stuck. A Tool Shed does not provide any tow or recovery services.

DO NOT USE FOR DEMOLITION The Equipment Protection Plan does not cover damage to the tracks. Replacement tracks \$2059.00 each. + Labor

Warning metal conducts electricity. Do Not use this Tractor where it may come into contact with power lines or other electric circuits. Failure to comply to this warning will result in serious personal injury or death. Keep appropriate distances from High Voltage lines. Smart digging means calling 811 before each job. Whether you are a homeowner or a professional excavator, one call to 811 gets your underground utility lines marked for FREE!

Most loader equipment accidents can be avoided by following simple safety precautions. These safety precautions, if followed at all times, will help you operate your loader safely.

Always wear the seat belt, eye protection, a hard hat and safety shoes when operating this tractor.

DANGER! This tractor was designed for low ground pressure applications & working in areas with tight access Not Steep Slopes. Do Not operate this tractor on more than a 15-degree slope it will Roll Over. Never operate or drive across a slope only up or down it.



Engine damage caused by roll over just under \$14,000.00 dollars!

The Equipment Protection Plan Does Not cover damage caused by Roll Over!

Improper use of a loader can cause serious injury or death.

- Do not lift or carry anybody on the loader or in the bucket or attachment.
- Do not walk or work under a raised loader or bucket or attachment unless it is securely blocked or held in position.
- This machine is equipped with a Roll Over Protective Structure (ROPS), fasten seat belt prior to starting the engine. Operate the loader from the "Operators Seat" only.
- Move and turn tractor at low speeds.
- Carry loader at a low position during transport.
- Avoid loose fill, rocks, and holes: They can be dangerous for loader operation or movement.
- Be extra careful when working on inclines. Avoid overhead wires and/or obstacles when loader is raised.
- Allow for the loader length when making turns.
- Stop the loader gradually when lowering or lifting. And use caution when handling loose loads.
- Lower loader when parking or servicing.
- Visually check for hydraulic leaks and broken, missing, or malfunctioning parts before using.
- Escaping hydraulic oil under pressure can have sufficient force to penetrate the skin, causing serious personal injury. If injured by escaping fluid, obtain medical treatment immediately.
- It is the loader renter's responsibility to be certain anyone operating the loader is aware of the safe way of operating the loader.

OPERATING INSTRUCTIONS

Always thoroughly read The Operators Manual located in the compartment above the seat before using this tractor and these Operating Tips.

Lifting the Load: When lifting the load, keep the bucket positioned so as to avoid spillage. Do not attempt to lift bucket loads in excess of the loader capacity.

Carrying the Load: When operating the loader keep the bucket as low as possible. This keeps the bucket center of gravity as low as possible and will give maximum tractor stability. When transporting the load, keep the bucket as low as possible to avoid tipping, in case a track drops in a rut.

Dumping the Bucket: Lift the bucket high enough to clear the side of the vehicle. Move the tractor in as close to the side of the vehicle as possible, then dump the bucket.

Lowering the Bucket: After the bucket is dumped, back away from the vehicle while lowering and leveling the bucket.

Operating with Float: During hard surface operation, keep the bucket level and put the lift lever in the float position to permit the bucket to float on the working surface. If hydraulic down pressure is exerted on the bucket it will wear faster than normal.

The float will also prevent the mixing of surface material with stockpile material. The float position will reduce the chance of surface gouging when removing snow or other material. Back grade occasionally with a loaded bucket to keep the working surface free of ruts and holes. Also, hold the lift lever forward so the full weight of the bucket is scraping the ground. Use the heel of the bucket.

Backfilling: Do not use the bucket in the dumped position for bulldozing. This method will impose severe shock loadings on the dump linkage, the bucket cylinder, and the tractor. It is a sure way to bend the hydraulic rams on the dump control. These rams cost several hundred dollars each and will be charged for because we consider using the bucket in the dump position to push dirt to be abuse.

Special Note: When these machines work on construction sites, they encounter hazards to the tracks. Broken concrete, buried pipe, stakes, reinforcing rods, running over curbs at high speeds while loaded, etc., can cause track damage. Also, spinning the tracks while up against a sharp object can cause severe track damage. ***The cost of replacing the tracks is at YOUR EXPENSE.***

REFUELING & MAINTENANCE

Warning: The Customer is responsible for all damages resulting from lack of fuel or lubrication. Check the motor oil, coolant, and hydraulic oil every time you refuel the equipment.

REFUELING DIESEL FUEL ONLY Stop the engine and shut off electrical equipment while filling the fuel tank. Use extra caution when fueling a hot engine. Always ground the fuel nozzle against the filler neck to avoid sparks. NEVER SMOKE while handling fuels.

COOLING SYSTEM Keep the radiator free of debris. If at any time the motor overheats, shut it off and call us immediately.

Danger: *Never remove the radiator cap on a hot engine the liquid is under pressure, extremely hot and will cause serious burns.* Liquid cooling systems build up pressure as the engine gets hot. Before removing the radiator cap, stop the engine and let the system cool. Remove the radiator cap only after the system is cold. For cooling systems with an overflow tank, the coolant can usually be checked at the tank without removal of the radiator cap.

If the person receiving this handout will not be the user of the equipment, forward these instructions to the operator. **If** there is any doubt as to the operation or safety of the equipment,

DO NOT USE!!! CALL A TOOL SHED IMMEDIATELY!!!

FAILURE TO FOLLOW THESE INSTRUCTIONS COULD RESULT IN INJURY OR DEATH